


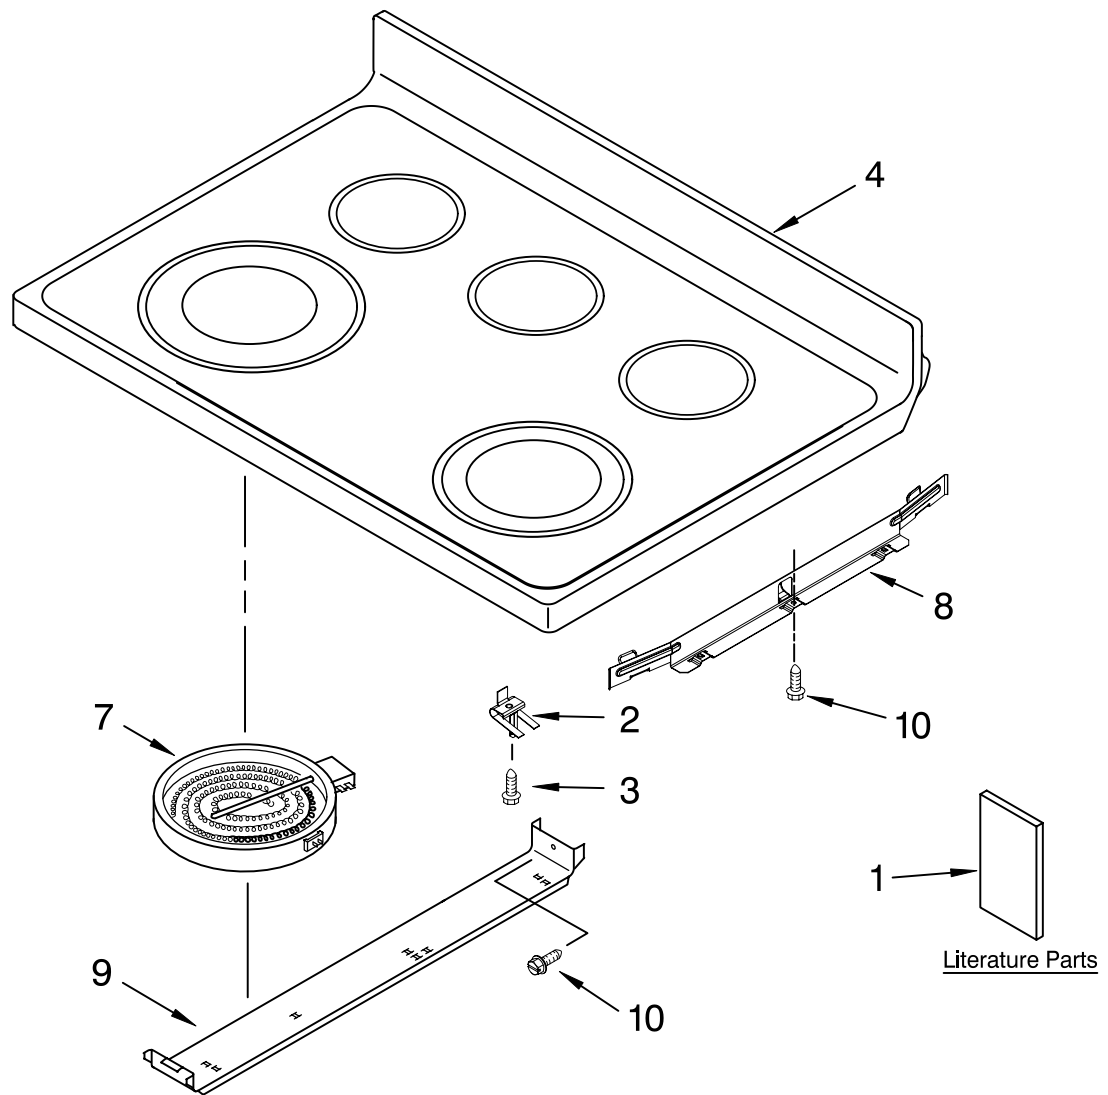

COOKTOP PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN CONVECTION OVEN




Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	2	W10035930	Spring, Locator	8	8524132	Shield, Wiring
	9763001	Owners Manual	3	3196170	Screw	9		Bracket, Element
	9762982	Tech Sheet	4		Cooktop		8272791	(2)
	9762996	Installation Instructions		9763334	White		8273720	(1)
		Template, Anti-Tip	7	9763336	Black	10	3196169	Screw
	9757143	English/French		9759351	Element, Surface			
	9757142	English/Spanish		8523698	2400/1200 W – LF			
	9762761	Brochure, Tips Safe Cooking		8523698	1200 W – LR			
				8523698	1200 W – RR			
				9759351	2400/1200 W – RF			
				8523700	100 W – CR			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

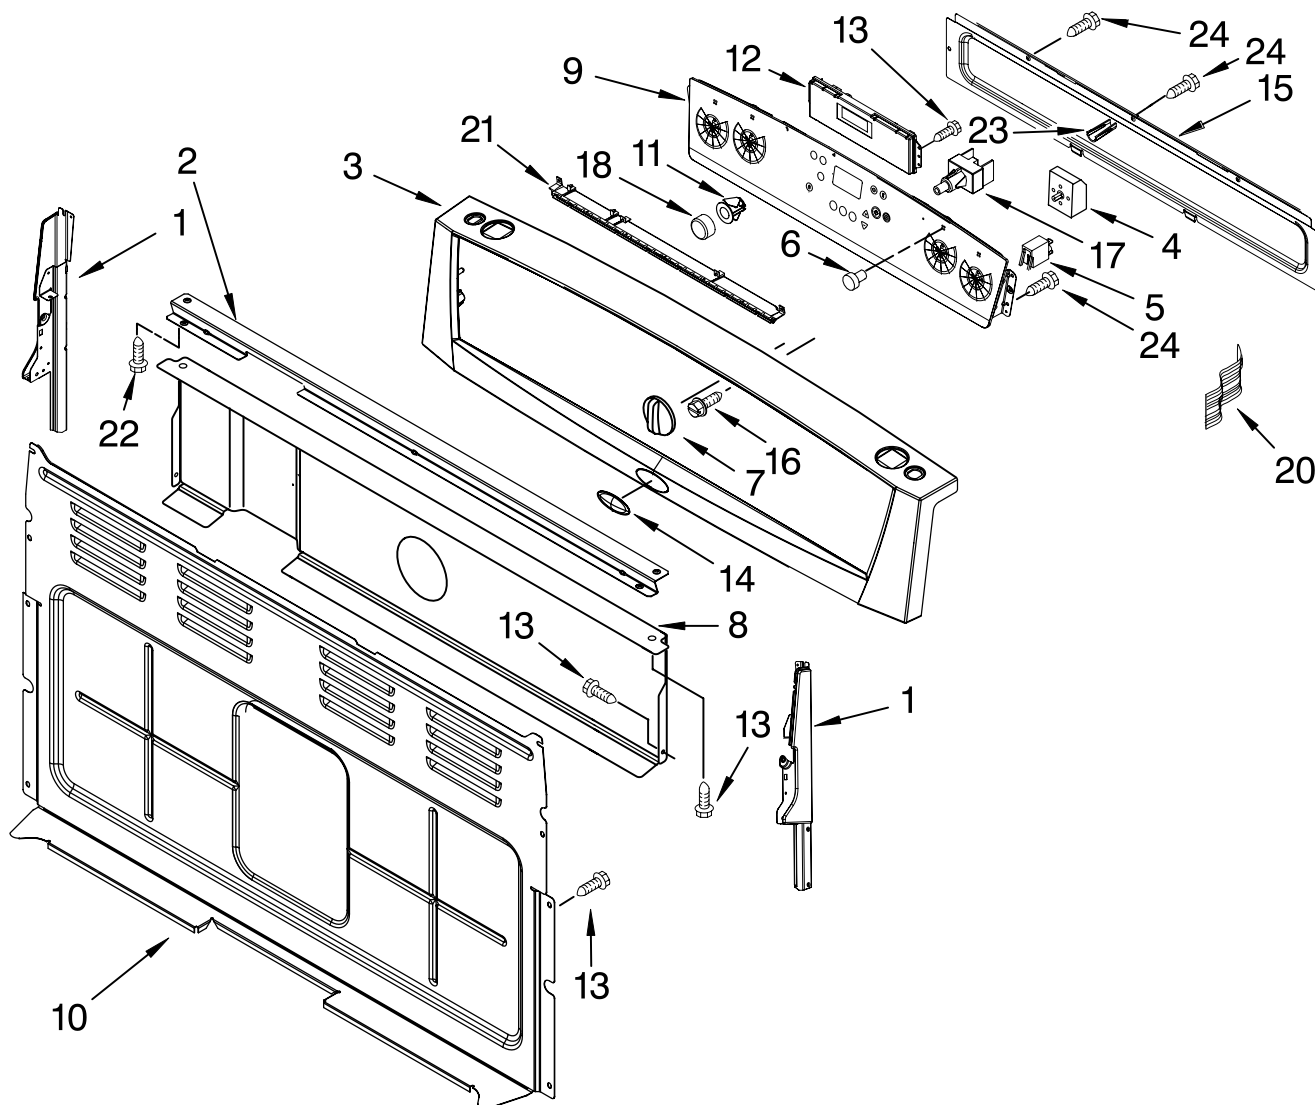

Illus. No.	Part No.	DESCRIPTION
1	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009080	Black Left Hand
	W10009090	Black Right Hand
2	9762095	Bracket, Console
3		Panel, Backguard
	9762585	White
	9762588	Stainless Steel
	9762586	Black
4		Switch, Infinite
	9758060	Left Front (Dual)
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front (Dual)
5	8523265	Light, Indicator
6	3196068	Lens, Light


Illus. No.	Part No.	DESCRIPTION
7		Knob, Infinite (4)
	9757132	White
	9758129	Black
8	8523280	Shield, Heat
9		Bracket, Control
	9763550	White
	9763551	Black
10	9756999	Cover, Rear
11		Bezel, Keep Warm
	9757489	White
	9758489	Black
12	9763050	Control, Range
13	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
14	9757613	Nameplate
15	9756366	Cover, Rear (Console)
16	3400882	Screw
17	8272820	Switch
18		Button
	9757492	White
	9758491	Black
20	9762426	Cnntr Cable, Flex
21	9757358	Reflector, Light
22		Screw
	3196166	White
	3196168	Black
23	9757490	Support, Glass
24	3196178	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

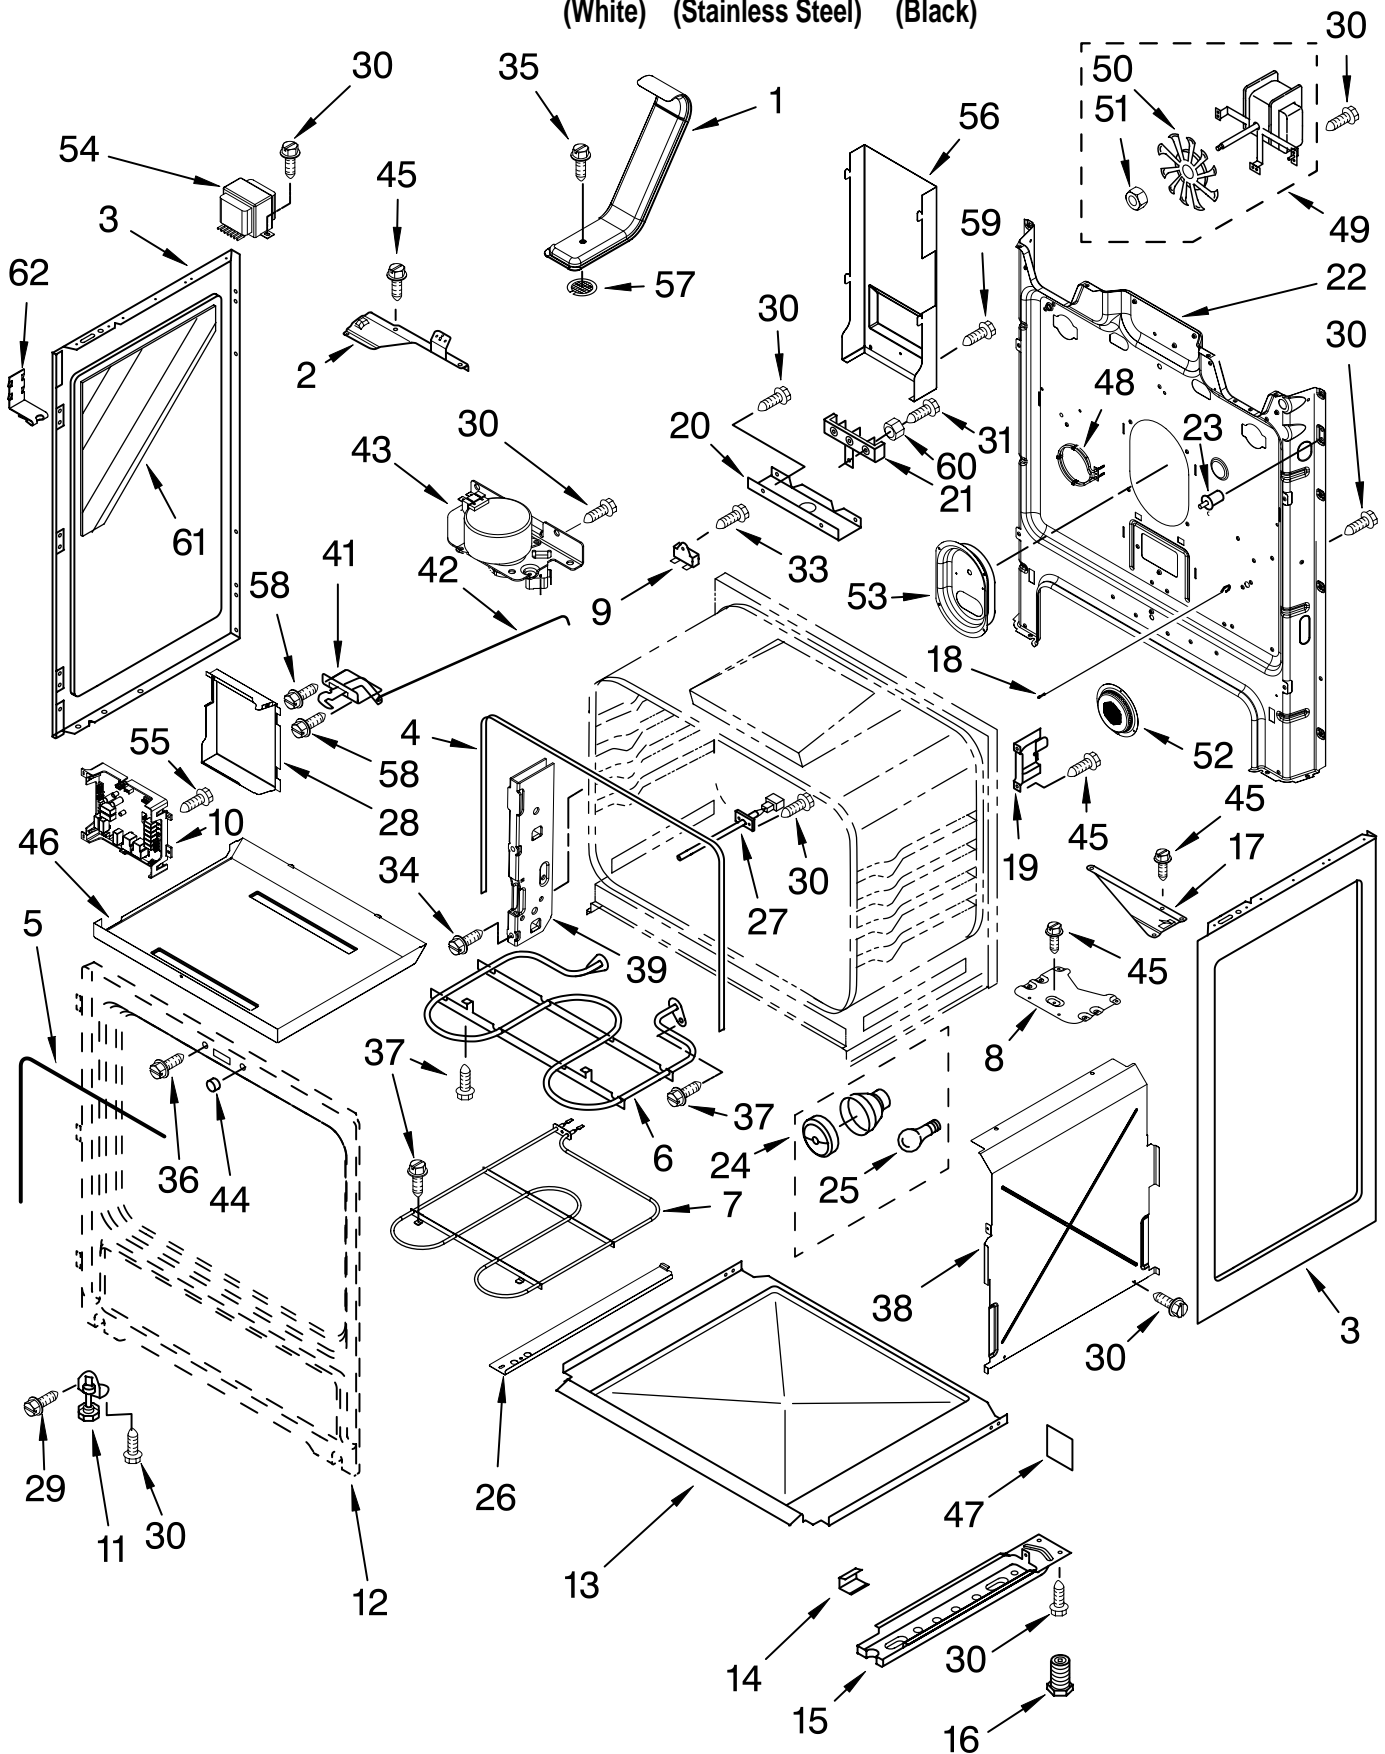

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9761300	Vent Tube Asmbly	22	9757029	Back, Main	47	9759689	Card, Insulator
2	8273905	Support, Corner LR	23	9757262	Switch, Door	48	9758525	Element, Convection
3		Panel, Side (2)	24	3196701	Light Socket Assy	49	9758925	Fan Motor, Convection
	8053830	White	25	311255	Bulb, Oven Light	50	4452226	Fan Blade
	8053832	Black	26	9755771	Cover, Tray	51	4452227	Nut
4	W10010350	Seal, Oven Flange	27	8273902	Sensor, Oven	52	9755775	Cover, Fan
5	8522416	Seal, Oven Door	28	9757970	Cover	53	9755776	Bracket, Fan
6	9757341	Element, Broil	29	3196179	Screw	54	9757311	Transformer
7	9755770	Element, Bake (Hidden)	30	4449809	Screw	55	8533930	Screw
8	3195736	Support, Front (2)	31	3400016	Screw	56	9757972	Cover, Box
9	3196548	Fuse, Thermal	33	3196172	Screw	57	9761301	Screen – Catalyst
10	9761909	Appliance Manager	34	W10031780	Screw	58	3196560	Screw (2)
11	3196037	Foot, Front (2)	35	3196566	Screw	59	3196178	Screw
12		Frame, Front (Not Serviced)	36	3196168	Screw	60	112432	Nut (3)
13	8054068	Tray, Insulation	37	3196174	Screw	61	9761490	Insulation
14	3196576	Clip, Panel (6)	38	9758238	Retainer, Side (2)	62	9761512	Clip, Mounting
15	9760314	Rail, Base (2)	39	9760407	Brkt–Mounting			
16	9761935	Foot, Rear (2)	41	9761013	Latch, Door			
17	3195987	Guard, Wire	42	3196961	Rod, Latch			
18	9757239	Rod – Dr Switch	43	9757241	Latch Asy, Rear			
19	3186116	Support, Oven (2)	44	9758701	Spacer, Door			
20	3186034	Bracket, Service	45	3196169	Screw			
21	9761958	Block, Terminal	46	9755769	Tray, Hidden Bake Element			


INSULATION

8272616	Insulation, Wrap
9755772	Insulation, Back
8272613	Insulation, Vent

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

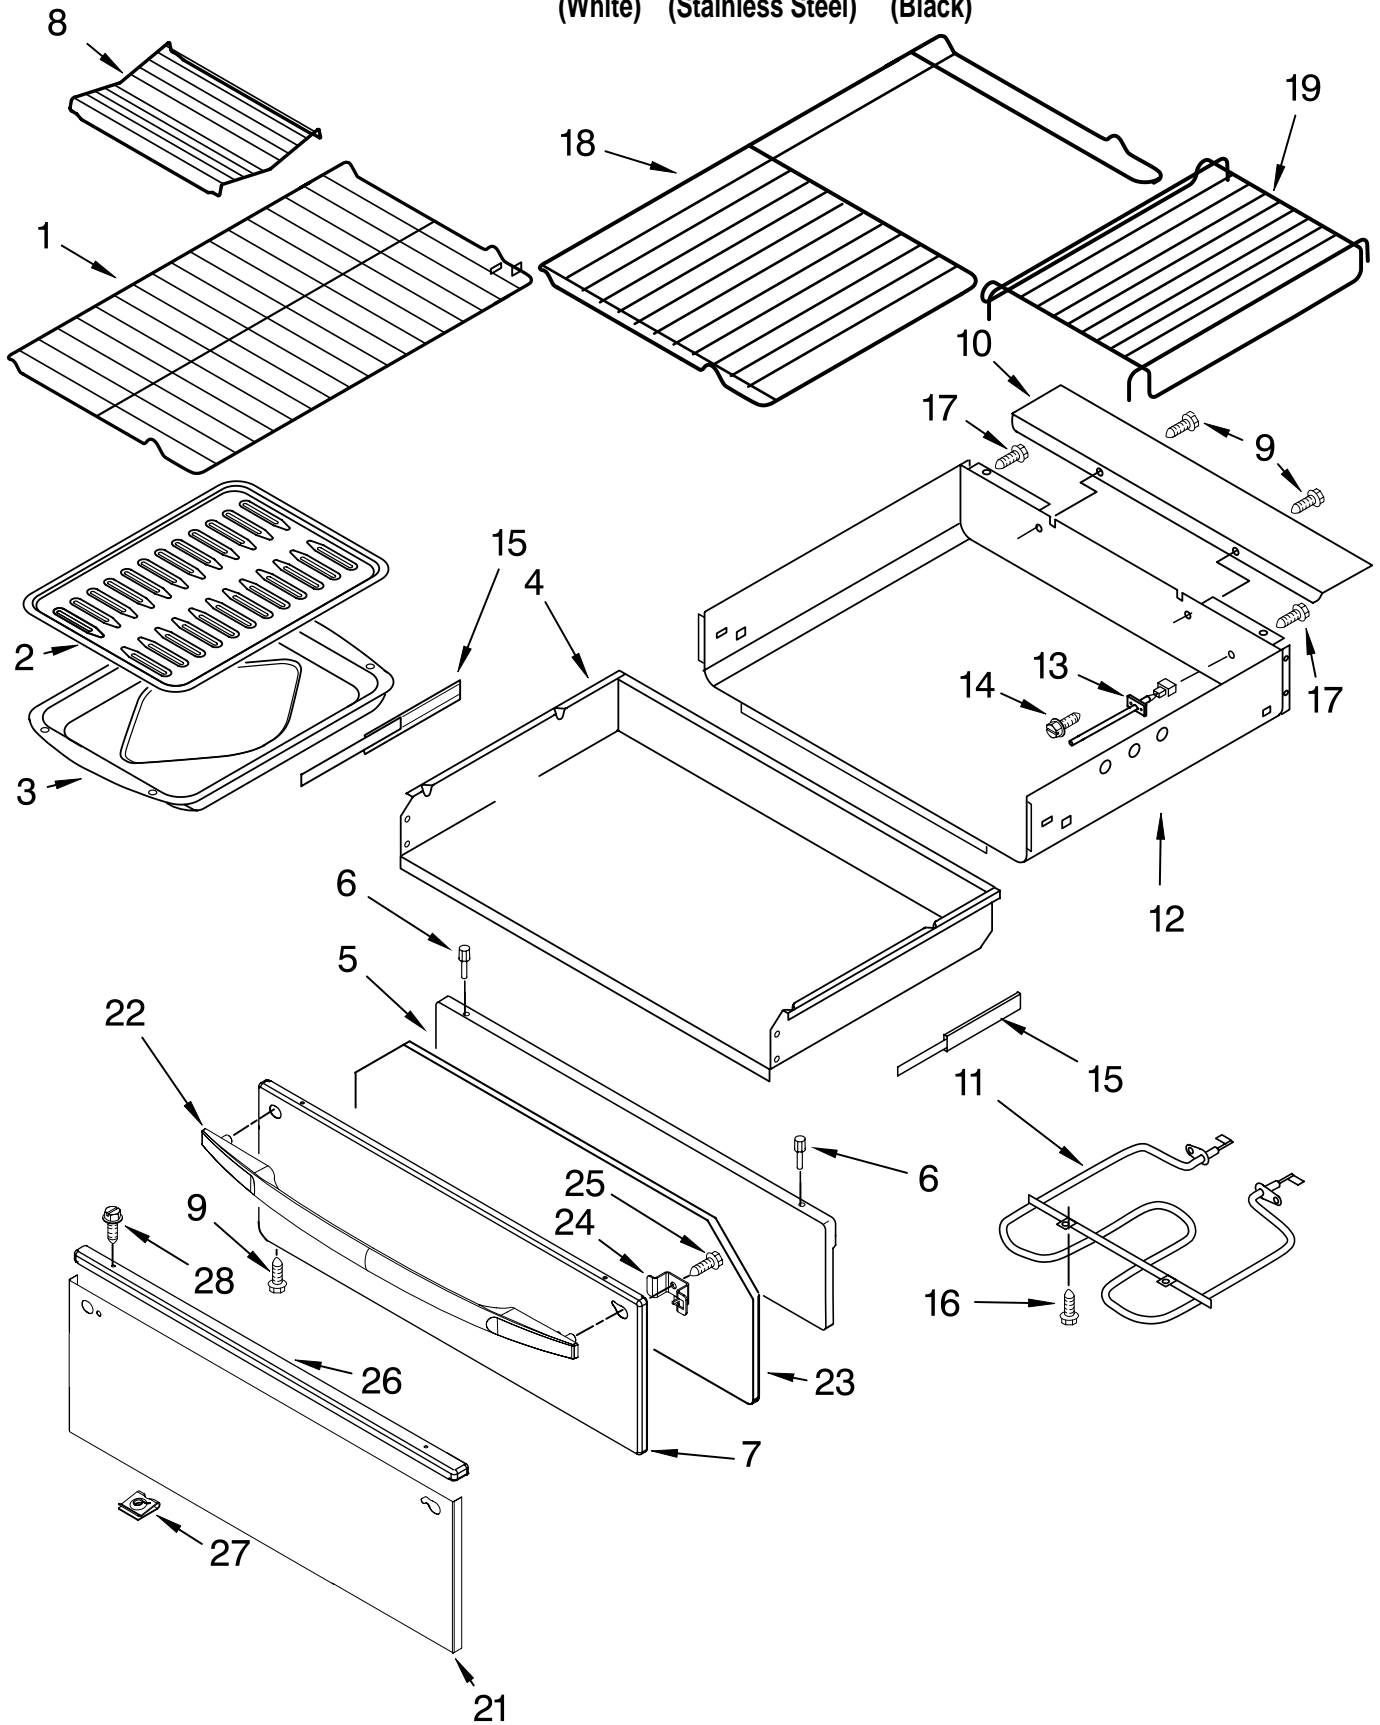

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DRAWER & BROILER PARTS


For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	3195996	Grill, Broiler
3	3196076	Pan, Broiler
4	8272610	Drawer, Warming
5	8272609	Panel, Inner
6		Rivet, Push (2)
	3196814	White
	3196813	Black
7		Panel, Drawer Frnt
	W10010930	White
	W10010950	Black
8	3181534	Rack, Roasting
9	3196168	Screw
10	8272977	Heat Shield, Element
11	9758520	Element, Warming
12	8274153	Enclosure, Drawer
13	8274149	Sensor
14	3196427	Screw
15		Slide, Drawer
	9761929	Left Hand
	9761930	Right Hand
16	3196174	Screw
17	3196178	Screw
18	8274021	Rack, Partial
19	8274022	Rack, Insert
21	W10010870	Add'l Pnl SS Only
22		Handle
	9761978	White
	9761979	Black
	9761981	Stainless Steel
23	8524234	Insulation
24	W10010830	Brkt – Handle
25	W10031780	Screw
26	W10022210	Trim, Drawer SS Model Only
27	9781235	Speed Clip SS Model Only
28	W10031790	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

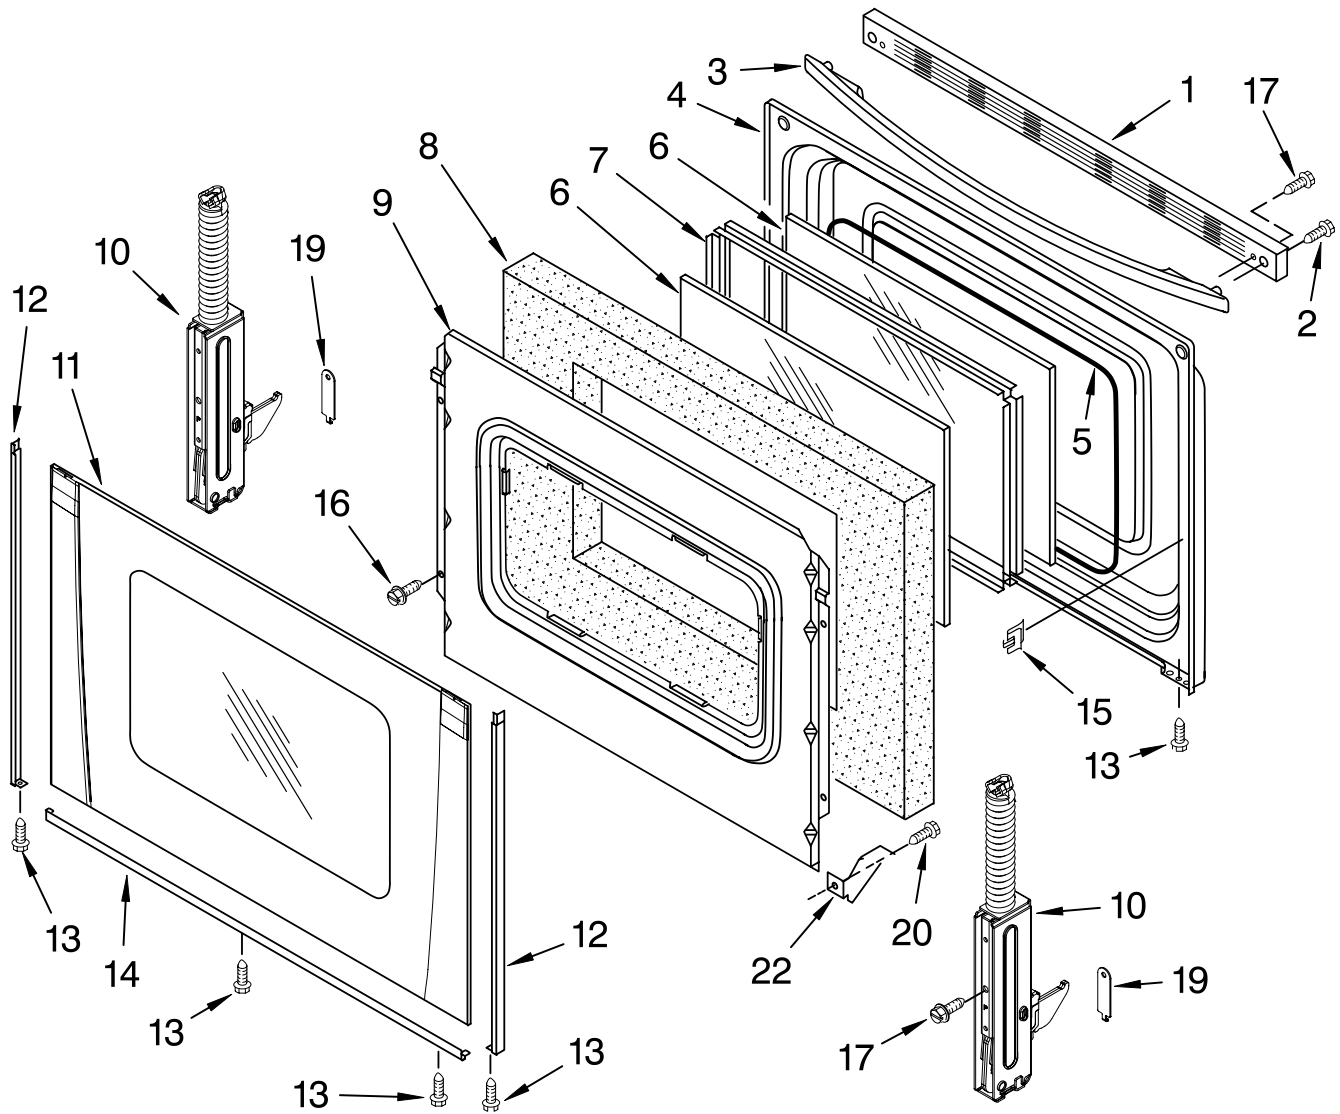

Illus. No.	Part No.	DESCRIPTION
1	9761975	Trim, Top White
	9761977	Stainless Model
	9762391	Black
2	3196164	Screw
3		Handle, Door
	9761978	White
	9761979	Black
	9761981	Stainless Steel
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insul.

Illus. No.	Part No.	DESCRIPTION
10	9761496	Hinge, Door (2)
11		Glass, Outer
	W10010660	White
	W10010690	Stainless Steel
	W10010680	Black
12		Trim, Side
	8523166	White Left Hand
	8523172	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	9762249	Unvrsl Slvr LH
	9762250	Unvrsl Slvr RH

Illus. No.	Part No.	DESCRIPTION
13	3196160	Screw
14		Trim, Lower
	8523175	White
	8523177	Black
15	3196025	Clip, Glass (4)
16	W10031790	Screw
17	W10031780	Screw
19	9761517	Clip, Dr Mntg (2)
20	3196165	Screw
22	3196794	Bracket, Window(2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: GR773LXSQ0, GR773LXSS0, GR773LXSB0
(White) (Stainless Steel) (Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black
	12 Ga. 150° c
242821	Wire, Blue
	14 Ga. 150°c
242822	Wire, Brown
	14 Ga. 150°c
242830	Wire, Brown
	14 Ga. 200°c
242823	Wire, Green
	14 Ga. 150°c
242824	Wire, Orange
	14 Ga. 150°c
242825	Wire, Red
	14 Ga. 150°c
242831	Wire, Red
	14 Ga. 200°c
242827	Wire, Yellow
	14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

Following Parts Not Illustrated

9762815	Harness, Wire (Cooktop Left)
9763105	Harness, Wire (Cooktop Right)
9762964	Harness, Wire (Console)
8273908	Harness, Wire (Warming Element)
9759000	Harness, Wire (Main)
9758192	Harness, Wire (Sensor/Dr Switch)
9756550	Harness, Bake Element (Hidden)
8523279	Wire, Ground
3196154	Screw